




*Never work on a loaded firearm. Remove magazine and clear chamber prior to installation.*

1. Remove the factory rear APC adapter.
2. To remove the hydraulic buffer, you will need a 3/32" roll pin punch and small hammer. Locate the roll pin on the side of the adapter as shown in the image below.

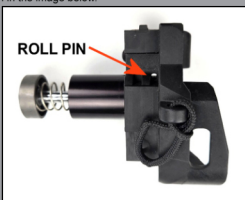

## INSTALLATION

1. Tap the factory roll pin all the way out of the rear adapter.
2. Pull the hydraulic buffer out of the adapter and insert it into the HDA3 adapter as shown below.
3. Insert the provided new pin from the side and tap it into place, securing the hydraulic buffer.
4. Install the HDA3 stock and adapter into the receiver.



ALL NFA RULES APPLY. It is up to the user to ensure that installing this product does not violate any rules set forth by BATF concerning NFA requirements.