




A3 INDUSTRIES

SIG MCX SPEAR / RATTLER

**Never work on a loaded firearm while installing accessories.
Remove magazine and clear chamber prior to installation**

1. This Installation assumes there is no current stock installed on the firearm. If there is, please remove it before proceeding.
2. Hold firearm with rear picatinny rail facing upward
3. Locate the steel rail insert from your HDA3 packet and insert it into the middle slot as shown.
4. Slide the HDA3 adapter up from the bottom, over the picatinny rail until it bottoms out.
5. Apply Loctite to the threads of the set screws and insert them back into the adapter, then tighten with the provided allen wrench.
6. Now mount the Stock or Brace to the adapter using the two 10-32 x 3/8" screws. Tighten screws with a T20 Torx driver

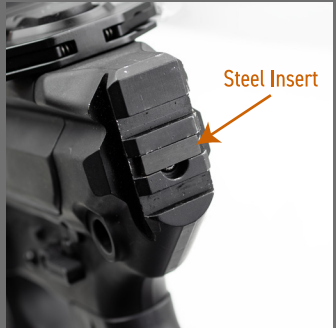

NOTE: Due to production variances, the mounting holes on the hinge are slightly oversized to allow some adjustability. If the stock does not line up properly to the adapter, loosen the mounting screws, re-adjust, then re-tighten

ALL NFA RULES APPLY. It is up to the user to ensure that installing this product does not violate any rules set forth by BATF concerning NFA requirements